

BASIC FAULT FINDING

Loss of cooling- Check power supply

- Check gasket is sealing properly
- Ensure that door has not been left open

Loss of display - Check power supply

Alarm codes - Phone our Technical Department with Alarm Code details



**OSBORNE REFRIGERATORS LTD
ROSE GREEN ROAD
BOGNOR REGIS
PO21 3EG**

**TELEPHONE +44 (0) 1243 267711
FAX +44 (0) 1243 265853**

E-MAIL

sales@osborne-ref.co.uk

WEBSITE

www.osbornerefrigerators.com

© 2015 Osborne Refrigerators Ltd

OSBORNE REFRIGERATORS LTD



MM1SC / MM2SC / MM3SC / MM9 / MM10

INSTALLATION AND USER MANUAL

INTRODUCTION

Osborne refrigerated cabinets are designed to store beverages and foodstuffs conveniently and efficiently. With a little care, as described in this manual, they should give a long and trouble free life.

UNPACKING

Check the packaging for obvious signs of damage before unwrapping, and contact your supplier if you are concerned about its condition. If the cabinet has been stored horizontally in transit, allow it to stand upright for an hour before plugging power cord into supply.

ELECTRICAL CONNECTION

The cabinet is complete with a factory-fitted plug suitable for a 220 volt / 13amp socket outlet. This appliance **must be** earthed.

LOCATION

Do not site the cabinet near a source of heat, such as a boiler or radiator, or in direct sunlight. This will conserve energy and reduce running costs. Do not place the cabinet on uneven or carpeted floors - only a solid surface ensures unrestricted air intake from below. Install the cabinet on a level surface - this will minimise vibration. The cabinet should be vertical or leaning fractionally backwards - it **must not** lean forward. The cabinet requires a 50mm (2") air gap behind and above for ventilation or overheating may occur.

CLEANING

Before use, and periodically thereafter, clean the inside of the cabinet with a soft cloth and a solution of one teaspoon of Bicarbonate of Soda (Sodium Bicarbonate), to one litre (1¾ pints) of warm water. Rinse with clean water and dry thoroughly. Clean the outside of the cabinet as necessary with mild detergent and warm water. Rinse with clean water and dry thoroughly. Ensure that the door seal and the front edge of the cabinet are thoroughly cleaned.

Do not use abrasives of any kind on the cabinet.

WARNING

Liquids spilt on the gasket will cause the door to stick which will tear the gasket. Please clean regularly as instructed above

RECOMMENDED OPERATION

This cabinet is designed to store foods and beverages.

Once the cabinet is stocked and in use, the cabinet should be left to run continuously. If the cabinet is to be taken out of commission for a period of time, switch off at the mains and prop the door open to allow air to circulate.

DIGITAL TEMPERATURE CONTROLLER

The digital controller has been **factory set** for an operating temperature of +1°C to +5°C and **should need no adjustment**. If you have a specific temperature requirement (e.g. for red wine storage), the temperature can be altered as follows. To adjust the temperature, press the "set" button until the display blinks. Push the up or down buttons to increase or decrease the required temperature. Push the "set" button again to fix the temperature.

When the cabinet is defrosting, "dF" will show on the display. "E0" and "E1" are error codes indicating a fault with the temperature probes. In the event of an error code being displayed, contact your supplier.

