

LOW ENERGY LED LIGHTING SYSTEM

Our new low energy LED lighting system is designed to be maintenance free. In the rare event of a failure, the LED units and transformer can be replaced (we recommend this is done by a competent person). DISCONNECT CABINET FROM MAINS SUPPLY FIRST. Open the door and remove the row of screws situated on the front of the top panel. Remove the panel and the perspex light cover. Undo the retaining screws from the mounting strip and disconnect wiring joint. To replace, reverse the process, ensuring that the wiring polarity is correct and that the back of the perspex cover fits within the housing. The transformer is situated inside an access panel at the rear of the unit.

BASIC FAULT FINDING

Loss of cooling- Check power supply

- Check thermostat is correctly set
- Check product is not forcing grill on to circulation fan stopping rotation and air circulation
- Check gasket is sealing properly
- Check condenser is clear
- Check air vents are unobstructed

Loss of light - Check LED unit

- Check transformer output is 12V DC

The guarantee shall not cover any fault or defect caused by:

Parts not assembled in accordance with the instructions of the manufacturer

Careless operating, handling and misuse and/or lack of maintenance

External sources such as weather or transit damage (except where reported at time of delivery)

Repairs or alterations carried out by unauthorised parties or agents

Normal wear and tear including door gaskets and any damage caused by harsh cleaning materials

Damage caused by the use of parts and accessories other than those produced or recommended by the manufacturer

OSBORNE REFRIGERATORS LTD

Rose Green Road

Bognor Regis

PO21 3EG

service@osborne-ref.co.uk

www.osborne-ref.co.uk

Tel +44(0)1243 267711

Fax +44(0)1243 265853

© 2011 Osborne Refrigerators Ltd



INSTALLATION AND USER MANUAL

MODEL 4200/4300



INTRODUCTION

This environmentally friendly refrigerated cabinet is designed to store wine, beer and food conveniently and efficiently. It has been fitted with LED lighting and low energy fan motors to use as little energy as possible while maintaining cooling performance. With a little care, as described in this manual, it should give a long and trouble free life.

UNPACKING

Check the cabinet for obvious signs of damage while unwrapping, and contact your supplier if you are concerned about its condition. If the cabinet has been stored horizontally in transit, allow it to stand upright for an hour before plugging power cord into supply.

ELECTRICAL CONNECTION

The cabinet is complete with a factory-fitted fused plug suitable for a 13amp socket outlet. This appliance **must** be earthed.

LOCATION

Do not site the cabinet near a source of heat, such as a boiler or radiator, or in direct sunlight. This will conserve energy and reduce running costs. Do not place the cabinet on uneven or thick carpeted floors - only a solid surface ensures unrestricted air flow around the refrigeration system. Install the cabinet on a level surface - an uneven surface can increase vibration and affect alignment of doors. The cabinet should be vertical or leaning fractionally backwards - it **must not** lean forward.

RECOMMENDED OPERATION

Once the unit is stocked and in use, leave the cabinet to run continuously. If the unit is to be taken out of commission for a period of time, switch off at the mains and prop the door open to allow air to circulate.

THERMOSTAT SETTING

The cabinet is thermostatically controlled (see fig 1). The control dial can be set from 1 (warmest) to 7 (coldest). Normally, a setting of 3-4 (indicated by marker) will maintain the cabinet at a suitable temperature but further adjustment may be necessary to allow for ambient conditions, frequency of door openings or other factors. Turning the control fully anti-clockwise (past 1) turns the cabinet off. The dial is found inside on the top rear panel.

SHELF CLIPS

Please ensure that the shelf clips are installed the correct way up (see fig 2). They will not support a loaded shelf if they are the wrong way up and damage will be done to the cabinet.

ROUTINE MAINTENANCE & CLEANING

This cabinet has been designed so that it requires almost no maintenance by the owner. The low-energy LED lighting system is designed to be practically maintenance free (see back page). A clean condenser will give more efficient running and longer cabinet life. Cleaning the condenser requires no specialist knowledge or equipment and should be carried out regularly. Simply remove the front cover plate and use a brush or vacuum cleaner to remove dust and fluff from the condenser whenever it builds up (see fig 3).

Important - If the condenser becomes blocked it will seriously effect the cooling performance of the cabinet. Prolonged blockage can lead to overheating and failure of the refrigeration system.

ALWAYS KEEP THE CONDENSER CLEAN & WELL VENTILATED

GENERAL CLEANING

Before use, and periodically thereafter, clean the inside of the cabinet with a soft cloth and a solution of one teaspoon of Bicarbonate of Soda (Sodium Bicarbonate), to one litre (1¾ pints) of warm water. Rinse with clean water and dry thoroughly. Clean the outside of the cabinet as necessary with mild detergent and warm water.

Rinse with clean water dry thoroughly. Clean the outside of the cabinet as necessary with mild detergent and warm water. Rinse with clean water and dry thoroughly. Ensure that the door seal and the front edge of the cabinet are thoroughly cleaned. **Do not** use abrasives of any kind on the cabinet.

DOOR GASKETS

Wine, beer and other sugary liquids spilt on the gasket will cause the door to stick which will tear the gasket. Please clean regularly as instructed above. If the door gasket requires replacement, it is usually easier to remove the door (see fig 3) and lay it down to avoid the glass unit falling out. Simply remove all the screws from the retaining strips, remove strips and remove the gasket. Replace with a new gasket and reverse the above instructions.

